

POWER OUTLET RELOCATOR

 
Installation Instructions

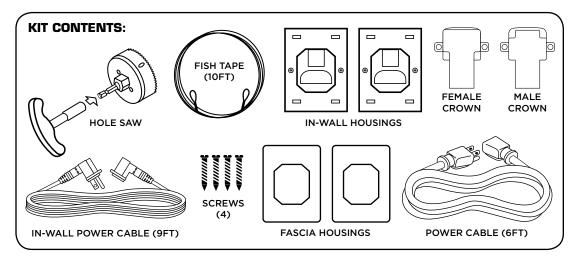


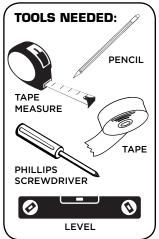









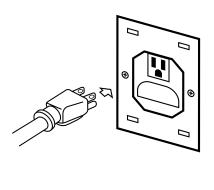


Center between studs

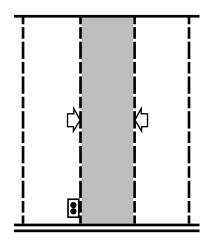


Measure and mark the location for holes with pencil

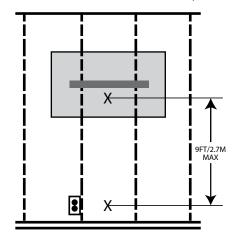


Drill holes with provided Hole Saw

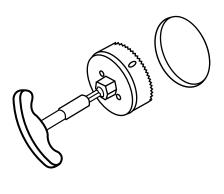

 
Use Fish Tape to snake the In-Wall Power Cable into the wall with the **Female Tip at the top** and the **Male Tip at the bottom.** Use tape to secure the Fish Tape if needed.

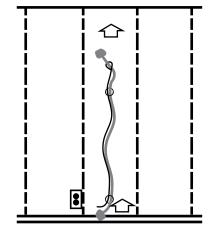



NOTE: Snake any additional cables at this time.

 Coax cable not included.



POWER OUTLET RELOCATOR


AS-PWRLOCATE

HELIOS MANAGEMENTALISMAN


Installation Instructions continued



At the top, insert Female Tip into the back side of an In-Wall Housing unit. Repeat at the bottom with the Male Tip.

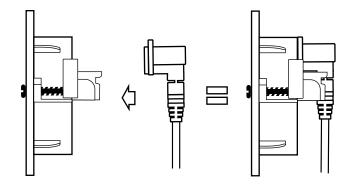


Snap on Female Crown over the Plug Tip and secure with screws. Repeat at the bottom with the Male Tip and Male Crown.

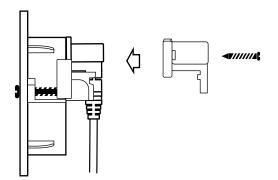


8

Fold in Dog Ears and slide Housing into wall. Repeat at the bottom with the Male Housing.

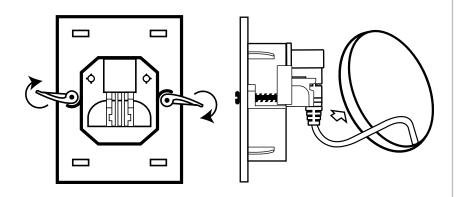


Level and screw Dog Ears until Housing is secure. Repeat at the bottom with the Male Housing.

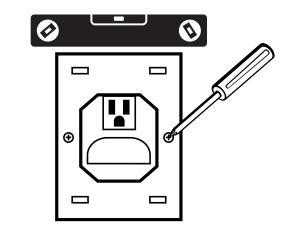



Snap Housing Fascia onto the front of the Housing. Repeat at the bottom with the Male Housing.

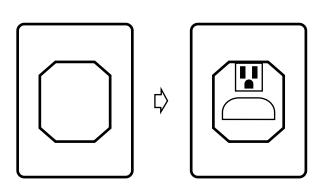



Plug Extension Cord into the bottom device. Installation is now complete.

