

# FMM44 ASSEMBLY INSTRUCTIONS



- Please read this instruction manual carefully before assembly
- Fits 26-55 in plasma and LCD TVs
- Weight Capacity 30kg (66lbs)



MetraHomeTheater.com 866-839-9187


460 Walker Street Holly Hill, FL 32117-2653 ©2017 Metra Electronics Corporation Designed and Manufactured to Metra Home Theater Group Specifications MADE IN CHINA

# CAUTION: SAFETY WARNING:

- Never let children climb on product or play with the product.
- Do not sit or stand on the product.
- Do not fasten a TV that is heavier than the recommended load rating to the mount.
- Mount to a suitable wood stud wall.
- Improper installation may cause property damage and/or personal injury, so the installation must be performed by two qualified contractors.
- The manufacturer is not liable for damage or injury caused by incorrect mounting, assembly or use.
- Improper handling can result in cuts and lacerations.
- Pictures/diagrams are for reference only, subject to our available products.
- Keep this instruction manual for future reference.

**CAUTION:** This mount is intended for use with weights not exceeding weight capacity of 66lbs. The wall itself must be capable of supporting 4X the standard weight. Please don't over tighten screws in order to avoid any injury. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories causing possible injury.

## Parts list:

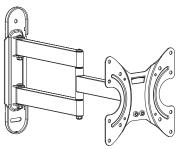

A-Wall plate unit 1pc



2



B-Extender(L) 2pcs

C-Extender(R) 2pcs


D-Plastic Cover 2pcs

Hardware list:

		$\bigcirc$					
HLag bolt	IAnchor	JM8washer	KM6X8	LAlley key	aM4X12bolt	bM5X12bolt	cM6X12bolt
2pcs	2pcs	2pcs	bolt8pcs	1pc	4pcs	4pcs	4pcs

dM8X25bolt 4pcs	eM4X30bo 4pcs	eM4X30bolt 4pcs		fM5X3@olt 4pcs		gM6X35bolt 4pcs		hM8X5@olt 4pcs	
			$\bigcirc$		$\bigcirc$				
iM5/M6 spacer 4pcs	jM8spacer 4pcs		kM5/M4 vasher4pcs		6washer 4pcs	m10mm spacer4pcs		n2.5mm spacer8pcs	

Step 1: Remove the bolts ① with Allen key (L) to separate wall plate unit (A) into two pieces.(Figure 1)

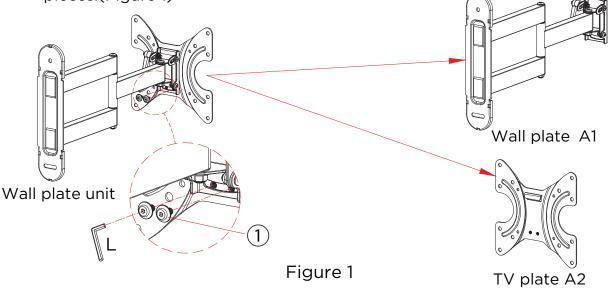

**Step 2**: Please remove the plaster board on the surface of the concrete wall when assembling the mount on a concrete wall. Hold wall plate (A1) against wall at the desired position on the concrete wall, then using a pencil, mark 2 hole locations. Then drill holes at the pencil marks using a 3/8" size drill bit to a depth of 2.5". Insert wall anchors (I) into the holes (you may need to use hammer to lightly tap the wall anchors into the wall). Then fix wall plate (A1) to the wall with screws (H) and washers (J). (Figure 2)

**ACAUTION:** The concrete wall must have a minimum thickness of no less than 5.5", and the surface covering may not exceed 3/8".

The concrete wall must have a minimum thickness of no less than 5.5", and the surface covering may not exceed 3/8".

**ACAUTION:** The wood stud minimum size is 2x4", and the surface covering cannot exceed 5/8". Drill holes on the wooden stud's center line.

**ACAUTION:** Don't not install the mount onto concrete block.



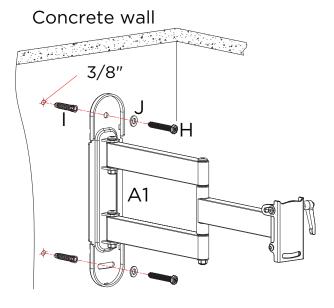


Figure 2 (keep the wall plate level)

 

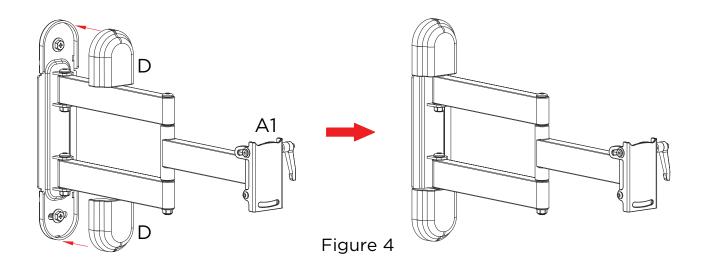

Step 4: Per the hole pattern on the back panel of TV, choose the suitable unit.
1. VESA within 200x200, connect TV plate (A2) to the TV directly.
2. VESA dimension of 400x400, attach the extended arms (B, C) to the TV plate by screwing in bolts (K) with Allen key (L). Do not tighten the bolts at this step!


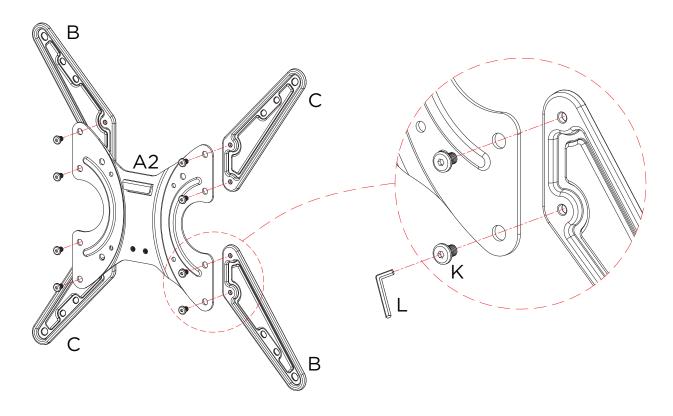


Figure 5

**Step 5**: Attach TV plate (A2) to the back of the TV. Choose the corresponding bolt, washer and spacer to fit the mounting holes on the rear of the TV.


If the back of TV is not flat, or the bolts used to assemble TV are too long, or there is interference between the TV bracket and cable inlets, we highly recommend that you use spacers.

**CAUTION:** Using incorrect bolts may damage your TV.

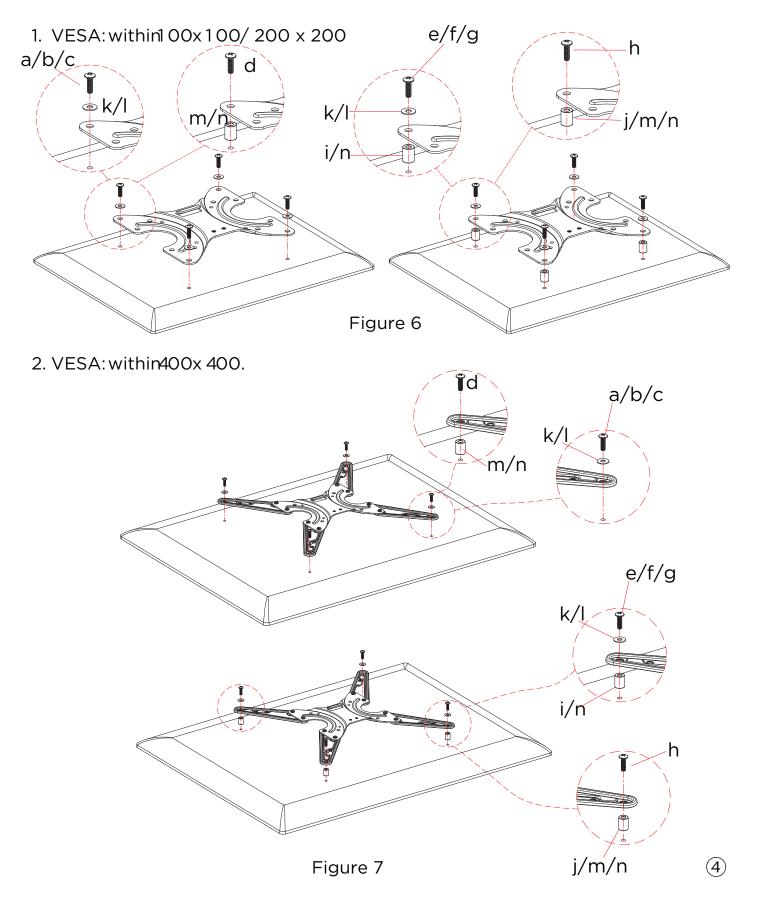

**Step 6**: Hang pre-assembled TV unit on the wall plate and fasten it with supplied bolts.

**CAUTION:** This step requires 2 or more professionals.

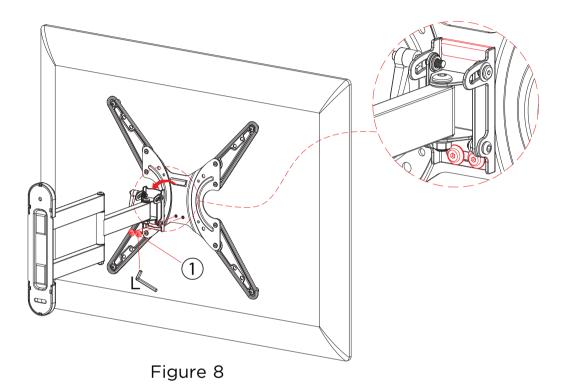


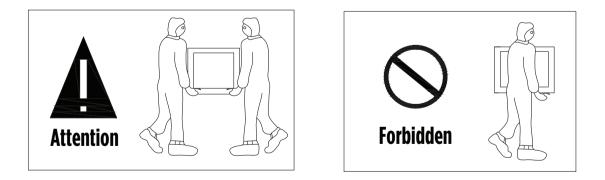


Figure 9

**Step 7**: Adjust the tilting angle with the spring loaded handle. Hold the TV and adjust it to your desired position, then fasten the handle and the bolt opposite to the handle to secure the position.

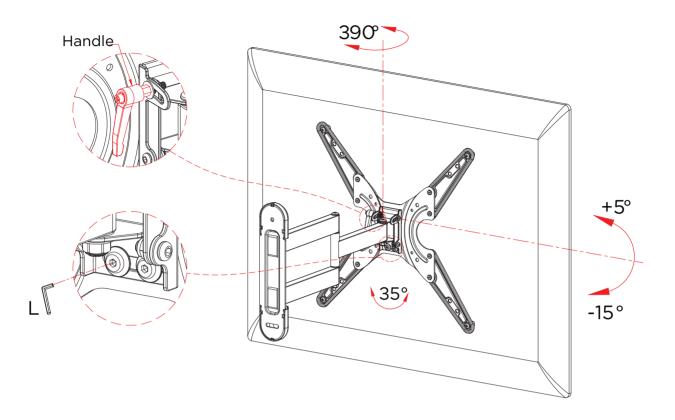

### Figure 11

#### PAY EXTRA CARE AND ATTENTION WHEN YOU FASTEN TWO TV MOUNTS TO THE BACK PANEL OF THE TV IN STEP 5. MAKE SURE THE APPROPRIATE MOUNTING HARDWARE IS BEING USED PROPERLY.

- 1. Select correct Mounting Hardware according to the screw hole size of your TV, then discard any remaining screws or spacers.
- 2. Carefully lay your TV on its face on a non-abrasive surface, making sure to lay padding underneath it so as not to damage the screen.
- 3. Place the left TV mount and right mount in the appropriate positions, making sure they are CENTERED on the back of the TV and LEVEL with one another.
- 4. This product only install on the perpendicular walls and not on ceilings.