



SPY-DOMEW4N124 & SPY-DOMEG4N124 Tech Bulletin Video Mode Change process update



Due to 4 in 1 model cameras having video technology unintentionally changed by incidental pressure applied to the toggle switch on the camera pigtail after installation an update has been made to the process to make changes to video modes.

The default video mode for 4 in 1 model cameras is AHD. If AHD is needed, no additional steps are required.

To change video mode to TVI, CVI or CVBS from AHD, please follow the steps below.

Within 10 seconds of powering camera, press toggle stick toward desired video mode for 5 seconds. If camera has been powered on for more than 10 seconds prior to changing video mode, no change will be made. To change video mode again simply disconnect and reconnect power and repeat the step above.