
2. Connections



3. Bi-directional IR pass back

- 1) It supports bi-directional IR pass back. User can control DVD at RX end and control TV at TX end.
- 2) If control at RX end, please connect IR blaster extension cable with IR OUT of TX and connect IR receiver extension cable with IR IN of RX. If control at TX end, please connect IR receiver extension cable with IR IN of TX and connect IR blaster extension cable with IR OUT of RX.


4. RS232 serial bi-direction passback function

1) Baud rate

Different encoding mechanism can not mix-connect, the baud rate of RS232 serial of these transmitter unit and receiver unit, support 2400, 4800, 9600, 19200, 28800, 38400, 57600, and 115200

2) Line order

Check and make sure the RS23S serial line connect firmly and well, and make sure serial data line is connected correctly as below: If the RS232 serial does not work by following above connection, please try to change the order of TXD line and RXD line.



3) Check baud rate

If you need to check the baud rate at last time, firstly, before

power on, set the baud rate to 115200 on your serial port test tool Then, power on, when the RS232 serial of product connects to serial port test tool, the software will read out the baud rate at present.

e.g: software show information " Baud rate: 9600", means 9600 is the current baud rate.

4) Set baud rate

For example: the current baud rate is 9600, but the baud rate of control equipment is 19200, so it needs to set the baud rate to 9600. At this time, in serial port tool, choose baud rate "9600", then input command "set: 19200" in character format and send it out.

FAQ

Q: No output on screen?

- A: 1) Firstly, please check and make sure the power supply is connected well. Then, check and make sure all cables are connected correctly.
- 2) Please check and make sure you have chosen the right HDMI input port of the TV/ screen.
- 3) Please check and make sure there is HDMI signal to be fed into transmitter unit, and check whether the receiver unit has been connected well with the display device.
- O: No"3" led indicator kepps flashing and no output?
- A: Check and make sure the HDMI display device has been switched to the right HDMI input channel.
- Q: No"3" led indicator kepps flashing, and no "3" led indicator keeps off?
- A: Check whether the TX's HDMI IN has signal input and make sure RX's OUT is well connected with HDMI display.
- Q: Output image with snow point?
- A: Change the HDMI cable between the transmitter unit and the source device, it will be better to use a shorter HDMI cable for re-testing.

Specification

Items	Specifications						
HDMI signal	4Kx2K,compatible with HDCP,support CEC and 24bits deep color						
Resolution Supported	480i/480P/576i/576P/720P/1080i/1080P/3D/4Kx2K						
Audio	LPCM、DTS Digital, Dolby Digital						
Network cable	able CAT6、CAT6A、CAT7						
	CAT6	70m					
Transmission length	CAT6A	70m	1080p@60Hz 48bpp, 1080p@60Hz 3D,				
. 3.	CAT7	70m	4Kx2K@60Hz				
Infrared back	Support 20~60kHz wide frequency devices and Bi-directional IR transmission						
Working temperature	0~55°C						
Storage temperature	-10~70°C						
Humidity	0~90%(no condensation)						
Power supply	DC12V/2A						
Power consumption	TX: <6W; RX: <8W						
Product dimension	109.49(L)x87.0(W)x23.4(H)mm						
Material	Iron alloy material						
Weight	TX:240g RX:250g						
Color	Color Black						

Disclaimer


The product name and brand name may be registered trademark of related manufacturers. TM and ® may be omitted on the user manual. The pictures on the user manual are just for reference, and there may be some slight difference with the real products.

We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function or design.

70m HDMI HDBaseT Extender

User manua



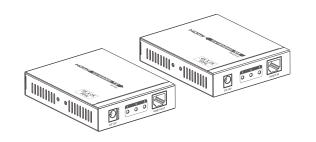

Thank you for purchasing this product. For optimum performance and safety, please read the instructions carefully and keep the manual for future reference.

Please read below safety instructions carefully before installation and operation:

- 1. Please pay attention to all the warnings and hints on this device.
- 2. Do not expose this unit to rain, moisture and liquid.
- Do not put any stuff into the device.
- Do not repair or open this device without professional people's guidance.
- 6. Shut off power and make sure environment is safe before installation.
- 7. Do not plug-in/out the connected cables when it is in using.
- 8. Use DC12V/2A. Make sure the specification matched if using $3^{\rm rd}$ party DC adapters.

Introduction

This HDBaseT single network cable extender transmits HDMI signal up to 70meters over cat6 fluently and clearly. It is lossless in signal and supports 3D, 24bits deep color, 4kx2k, CEC, HDCP and ultra HD 4KX2K@60Hz. This product supports to power over network cable, just connect the power adapter with the receiver unit, can keep this device working normally. This product is perfect for AV transmission in applications of HD conference system, HD video shooting, HD multimedia education system, HD digital advertising and signage etc.

Features

1. Apply HDBaseT extend technology.

- 2. Uncompressed HDMI video signal.
- 3. Suppored resolution is up to 4Kx2K@60Hz ultra HD.
- 4. Extend 4Kx2K@60Hz signal over cat6 up to 70 meters.
- 5. Support bi-directional IR pass back.
- 6. Support bi-directional RS232 control.
- 7. Support HDCP, CEC, 24 deep color.
- 8. Support uncompressed LPCM audio and compressed DTS-HD, Dolby True HD.
- Can be powered by network cable. It only needs to input 12V power for receiver for normal working.

Package Contents







x1pcs



HDMI to HDBase1 TX Sender x1pcs

RX Receiver x1pcs









IR blaster extension cable x1pcs

IR receiver extension cable x1pcs

RS232 serial port cap ×2pcs


• Installation Requirements

- HDMI source devices: with HDMI OUTPUT interface, DVD, PS3, STB, PC etc.
- 2. Display devices: With HDMI INPUT port, SDTV, HDTV, projector
- 3. Network cables :

UTP/STP Cat6/Cat6A/Cat7 network cables, which following the standard of IEEE-568B.

Panel Description


1. HDMI to HDBaseT TX Sender





- 1. The first led: It turn on when power on.
 - 2. The second led:
- It turn on when the transmitter unit and the receiver unit connect well with each other, and it flashes when there is no transmission between the transmitter unit and the receiver unit.
 - 3. The third led: It turn on when the receiver unit connect well with the HDMI display device, and it turn off when no transmission between the receiver unit and the display device.
- ③ HDBT Output
 ④ HDMI input
 HDMI source device
- 3 Reset button Press for restarting the unit
- © RS232 RS232 control
- ② IR receiver extension cable interface Connect with IR receiver extension cable. Please make sure the remote control is within the required range of IR receiver
- IR blaster extension cable interface
 Connect with IR blaster extension cable. Please put the IR blaster close to source device to best transmit the IR signal from receiver

2. HDBaseT to HDMI RX Receiver





_		Power input	Connect with DC12V2A power adapter				
		Transmission signal indicator	1. The first led: It turn on when power on. 2. The second led: It turn on when the transmitter unit and the receiver unit connect well with each other, and it flashes when there is no transmission between the transmitter unit and the receiver unit. 3. The third led: It turn on when the receiver unit connect well with the HDMI display device, and it turn off when no transmission between the receiver unit and the display device.				
1	3	HDBT input	HDBaseT signal input				
4		HDMI output	Connect with HDMI display device				
	(5)	Reset button	Press for restarting the unit				
	6	RS232	RS232 control				
⑦ ⑧		IR receiver extension cable interface	Connect with IR receiver extension cable. Please make sure the remote control is within the required range of IR receiver				
		IR blaster extension cable interface	Connect with IR blaster extension cable. Please put the IR blaster close to source device to best transmit the IR signal from receiver				

• Installation Procedures

1. To make a Cat6/6A/7 network cable

Follow the standard of IEEE-568B:



1	white and orange	4	blue	7	white and brown
2			white and blue	8	brown
3	white and green	6	green		